 



Get to know your Tablet

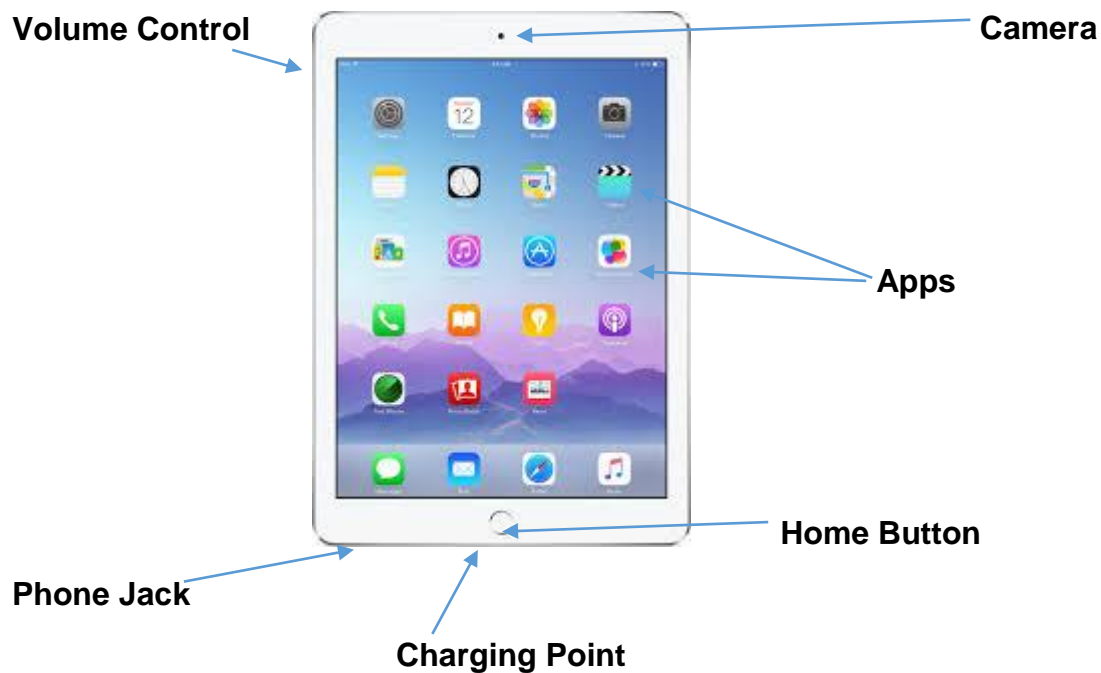

Get to know your Tablet

Please use this guide to find your way around your tablet device. If you get lost or are unsure about what buttons you have pressed just press your **“home button”** and this will bring you back to your home screen.

 A tablets Home Button is used to close out of an app and return to the home screen, making it easily the most important button on the iPad

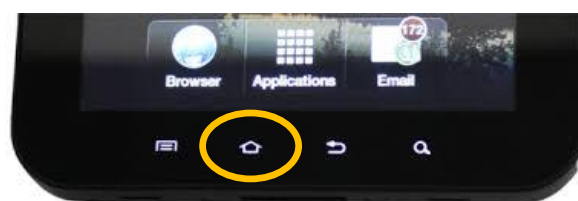


In your setting icon you will find a lot of useful information including:

- Airplane Mode
- WiFi
- General - which includes info about software, storage date and time etc
- Display and Brightness
- Wallpaper - this is the picture that appears on the background of your device
- Sounds



Settings Icon for an iPad



 Setting Icon for an Android
(eg Samsung, Hudl etc)

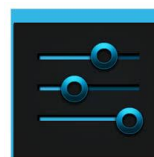

  Once you click on your settings icon, you can navigate through the settings Tab, if you want to go back to the previous page you were on just click on the back arrow located at the top of the screen. If you are using an Android Tablet you can use you back arrow located at the bottom of the device.

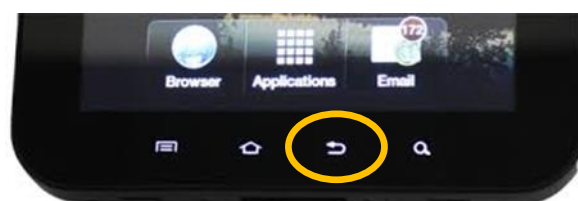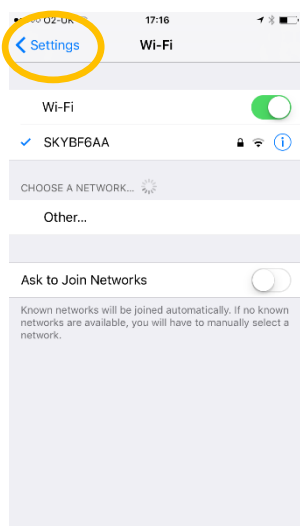

Moving/Deleting Apps

 
To move an app hold your finger on the app for 3 seconds, this will allow you to move the app around your screen.

To delete an app on an android device - Place your finger on the app you wish to delete drag the app to the top of the screen where it says **“uninstall”** a trash can will also appear beside it, it will then delete, your device may also ask you again if you wish to delete the app, you can click continue or cancel.



Get to know your Tablet

To delete an app on an iPhone - Place your finger on the app you wish to delete, the apps on your screen will start to shake and have a small 'X' on the icon, if you click on the X, your device will ask you whether or not you wish to delete the app if you do click on **“delete”** if not click on **“cancel”**

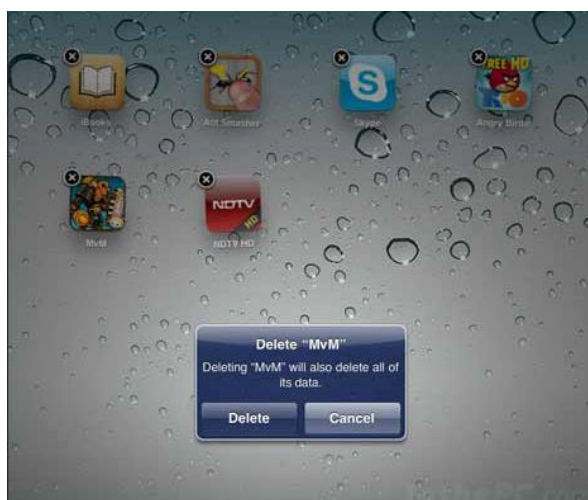

March 2017